


Replacement parts:

Rev. 5/14/04

SATA LM2000 B & K HVLP SATA LM2000 B, H & K RP

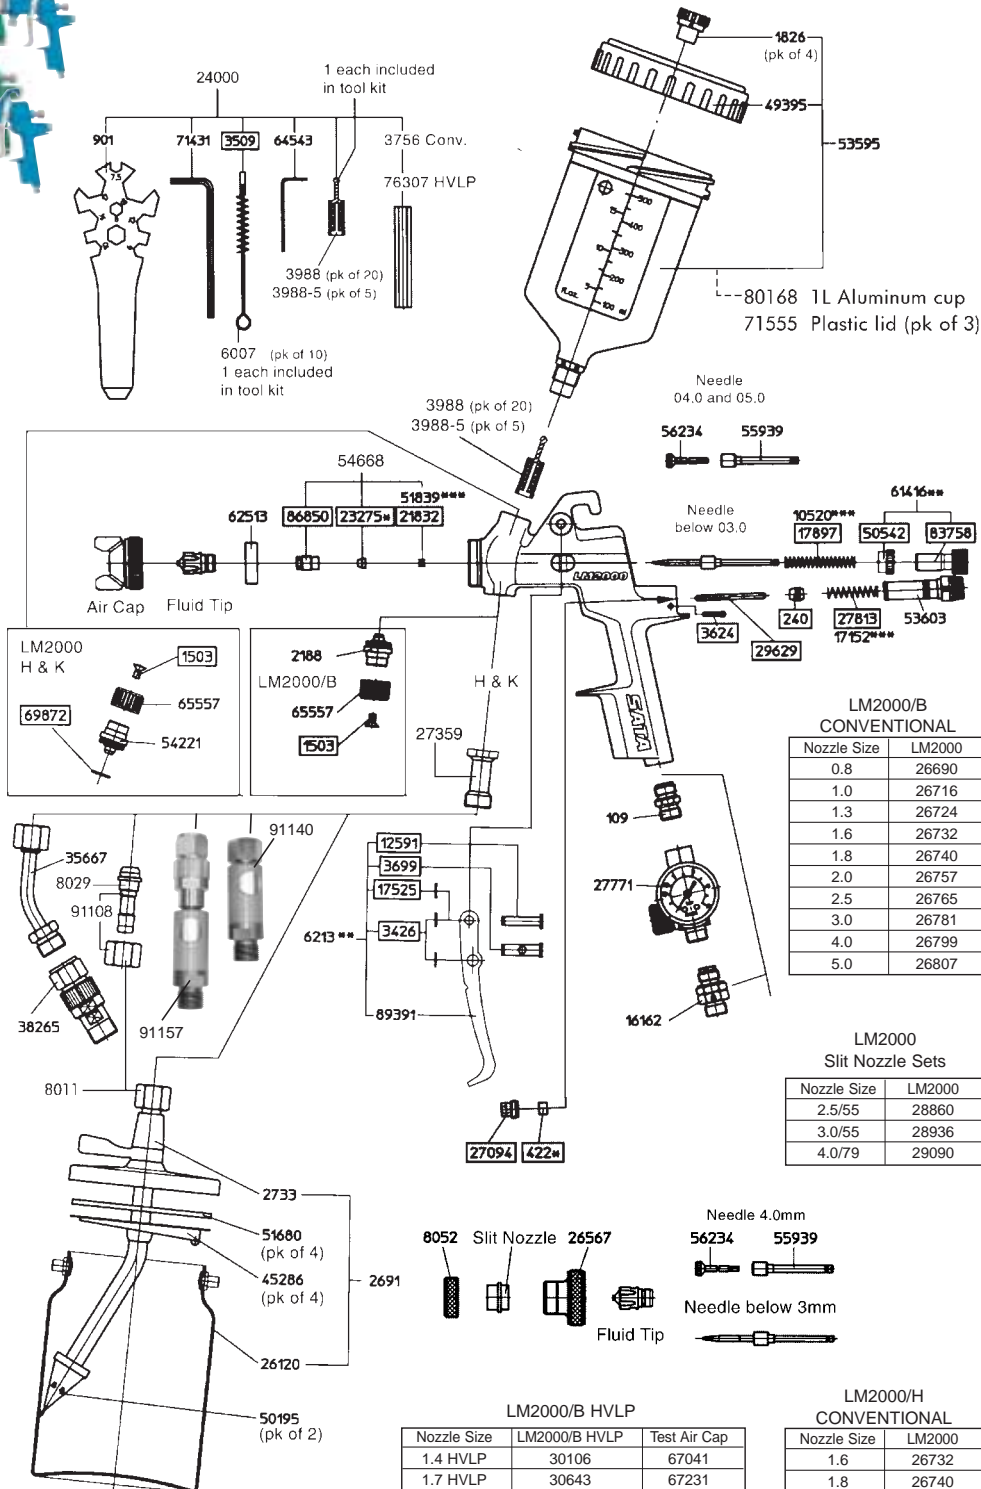

- | Part # | Description |
|--------|--|
| 109 | Air inlet fitting, 1/4" BSP |
| 240 | Air piston packing |
| 422 | Needle and air piston packing |
| 901 | Universal spanner wrench |
| 1503 | Fan control screw |
| 1826 | Non-drip device, pk of 4 |
| 2188 | Fan control, gravity |
| 2691 | Cup and deck assembly, conventional |
| 2733 | Deck only |
| 3426 | Circlip |
| 3509 | Cleaning brush |
| 3624 | Pin, micrometer |
| 3699 | Pin, lower trigger |
| 3756 | Deep socket |
| 3988 | Paint sieve, pk of 20 |
| 3988-5 | Paint sieve, pk of 5 |
| 6007 | Standard cleaning brush, pk of 10 |
| 6213 | Trigger service set |
| 8011 | Cap nut, 3/8 |
| 8029 | Hose connect GR |
| 8052 | Retaining ring |
| 10520 | Needle spring, pk of 12 #17897 |
| 12591 | Pin, upper trigger |
| 16162 | Swivel fitting, /BSP |
| 17152 | Air piston spring, pk of 12 #27813 |
| 17525 | Lock spring |
| 17897 | Needle spring |
| 21832 | Needle packing spring |
| 23275 | Packing, needle |
| 24000 | Tool Set, LM2000 |
| 26120 | Aluminum cup, 1.0 liter |
| 26567 | Mixing nozzle |
| 27094 | Air piston packing holder |
| 27359 | Material inlet fitting |
| 27771 | Air micrometer with gauge |
| 27813 | Air piston spring |
| 29629 | Air piston, LM2000 |
| 35667 | Paint pipe, R 3/8 |
| 38265 | Material filter, R 3/8 |
| 45286 | Drip proof, pk of 4 |
| 49395 | 0.6 liter cup lid |
| 50195 | Sieve, conventional pk of 2 |
| 50542 | Lock nut, fluid control |
| 51680 | Cup gasket, pk of 4 |
| 51839 | Needle packing spring, pk of 12 #21832 |
| 53595 | 0.6 liter plastic gravity cup |
| 53603 | Air micrometer |
| 54080 | Packing set, LM2000 |
| 54221 | Fan control, LM2000 H+K |
| 54668 | Needle packing service set |
| 54957 | Repair kit, LM2000 |
| 55939 | Needle rod, 4 & 5mm |
| 56234 | Needle tip, 4 & 5mm |
| 61416 | Fluid control service set |
| 62513 | Air distribution ring, LM2000 |
| 64543 | Allen wrench, 2mm |
| 65557 | Knob, fan control |
| 69872 | "O" Ring, fan control |
| 71431 | Allen wrench, 4mm |
| 71555 | Plastic lid, pk of 3 |
| 76307 | Socket wrench |
| 80168 | 1L Aluminum cup |
| 83758 | Fluid control |
| 86850 | Needle packing holder |
| 89391 | Trigger, with piston pad |
| 91108 | Nipple and nut |
| 91140 | QC w/Nipple |
| 91157 | QC w/Filter and nipple |

LM2000/B CONVENTIONAL

Nozzle Size	LM2000
0.8	26690
1.0	26716
1.3	26724
1.6	26732
1.8	26740
2.0	26757
2.5	26765
3.0	26781
4.0	26799
5.0	26807

LM2000 Slit Nozzle Sets

Nozzle Size	LM2000
2.5/55	28860
3.0/55	28936
4.0/79	29090

LM2000/B HVLP

Nozzle Size	LM2000/B HVLP	Test Air Cap
1.4 HVLP	30106	67041
1.7 HVLP	30643	67231
1.9 HVLP	30742	67249
2.1 HVLP	31047	67231

LM2000/K HVLP

Nozzle Size	LM2000/K HVLP	Test Air Cap
0.9 HVLP	26823	25478
1.1 HVLP	26856	25478
1.3 HVLP	26864	25478
1.5 HVLP	26872	25478

LM2000/H CONVENTIONAL

Nozzle Size	LM2000
1.6	26732
1.8	26740
2.0	26757

LM2000/K CONVENTIONAL

Nozzle Size	LM2000
1.0	26716
1.3	26724
1.6	26732
2.0	26757
2.5	26765
3.0	26781
4.0	26799

□ Indicates parts contained in LM2000 repair kit, part number 54957

* Indicates LM2000 packing set, part number 54080

** Indicates parts available separately or in a service set

*** Indicates package of 12 springs part number 10520 (spring #17897) part number 17152 (spring #27813) part number 51839 (spring #21832)